

4-471-136-13(2)

## Digital Surround Headphone System

MDR-HW700DS

©2013 Sony Corporation Printed in Malaysia
http://www.sony.net/

- Audio signals (sampling frequency, bit length, etc.) transmitted from an HDMI jack may be disrupted by the connected device.
- Sound may be interrupted when the sampling frequency or the number of channels of audio output signals from the playback device is switched.
- When the connected device is not compatible with copyright protection technology (HDCP), the image and/or the sound from the HDMI OUT jack of the processor may be distorted or may not be output. In this case, check the specification of the connected device.
- We do not recommend using an HDMI-DVI conversion cable.
- Even if an input other than HDMI is selected on the processor, the video signal of one of the devices connected to the HDMI IN jacks is output from the HDMI OUT jack.
- This processor supports Deep Color, \*x.v.Colour, 3D, and 4K transmission.
- To enjoy 3D images, connect a 3D-compatible TV and video device (Blu-ray Disc player, \*PlayStation®3, etc.) to the processor using HDMI cables, put on 3D glasses, and then play back 3D compatible Blu-ray Disc.
- To enjoy 4K images, the TV and players that are connected to the processor must be compatible with the 4K images.
- Connection to audio and video jacks on your personal computer is not guaranteed to work with this system.

### Warning beeps and operation beeps

- The status of the headphones is reported by the beeps as follows.
  - Repeated short beeps.
    - The headphones are not receiving the RF signal from the processor.
      - Use the headphones in the RF signal transmission area.
      - Turn on the processor.
    - Make sure there are no other wireless devices using the 2.4 GHz or 5 GHz wireless frequency band, or there are no electromagnetic waves being generated from a nearby microwave oven.
      - Change the processor position.
  - A long beep (about 2 seconds) sounds and the headphones turn off.
    - When the rechargeable battery of the headphones has been consumed, a warning beep (about 2 seconds) sounds and the headphones are turned off. The headphones can be turned on even when there is no battery power remaining, but they turn off almost immediately. Charge the headphones.
  - Short beeps sound twice and the headphones turn on.
    - This indicates that the headphones have been turned on. This is not a malfunction.
  - Short beeps sound 3 times and the headphones turn off.
    - This indicates that the headphones have been turned off properly. This is not a malfunction.

For the other of our warning beeps, refer to the Help Guide.

### AVERTISSEMENT

